

**HYBRID DEVELOPMENT INTERNATIONAL
RACING INTERCOOLER KIT
INSTALLATION MENU**



Please read before continue

Please read through all the instruction and practice all precaution in all aspect of safety and every step prior and during the installation. This installation menu is purely for **HYBRID DEVELOPMENT INTERNATIONAL RACING INTERCOOLER KIT**

and is used as guide only. As different vehicles in different countries may have different specifications and component layout. Therefore, it is important to make sure the connection is properly done by authorized personals or dealers.

Warning

- Check and clean all open area for foreign object inside.
- Installation should only be carried out by authorized dealer or agent only.
- Avoiding water, liquid or fluid during and post installation.
- Do not install the unit in a place that will interface the driver.
- This product is off road only not for public road.
- Never adjust the fitment when the car is moving or on public road ,doing so is dangerous to yourselves and others
- Make sure there is adequate ventilation if you are installing or setting it in door.

LIMITED WARRANTY

Hybrid Development (HK) ltd will warranty for the period of 1 year from original purchase against all defects in workmanship and materials. Hybrid Development (HK) ltd is not responsible for expenses incurred for labor, personal injury or inconvenience. Hybrid Development (HK) ltd sole responsibility is to offer a replacement product or to repair the damaged product. Hybrid Development (HK) ltd cannot warranty products damaged by improper installation. All other products sold by Hybrid Development (HK) ltd are warranted by the original manufactures and is not the responsibility of Hybrid Development (HK) ltd.

All products are for racing use only.

All rights reserved.

For more information please visit www.hybrid-power.com or contact tech@hybrid-power.com

Hybrid S14,15 intercooler fitting

Installation instruction



Parts list
Piping, silicon hose and super clamp kit



Description	Qty
2.5" silicon hose	1
2.75" silicon hose	2
2.5-3" silicon hose	1
2.75-3" silicon hose	1
3" super clamp	2
2.5" super clamp	3
2.75" super clamp	5
Top bracket (only for S14)	2
Bottom bracket	2
Hybrid intercooler	1

Note
Picture may be different than the actual product!
It is a reference guide only!


Remove the shaded std parts



1. Remove front bumper bar



1. Trim the bottom splash tray

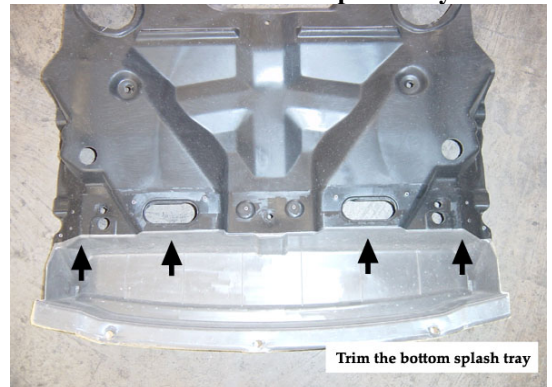

2. Bend the car Horns and remove Standard intercooler, piping and Install bottom intercooler bracket.




2. Trim the front driving light holder



3. Trim both side top bumper bar support




3. Drill a hole on head light support for supporting intercooler. For S14 please see note 1.

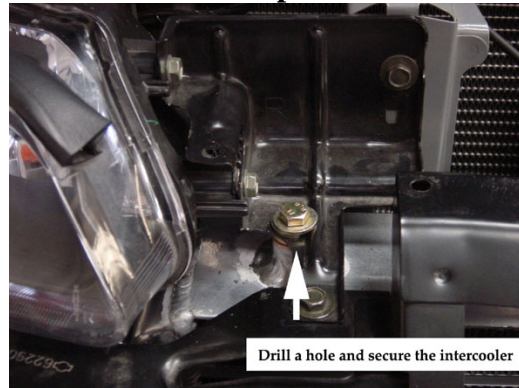


4. Trim both chassis noses




4. Fit the lower bar bracket

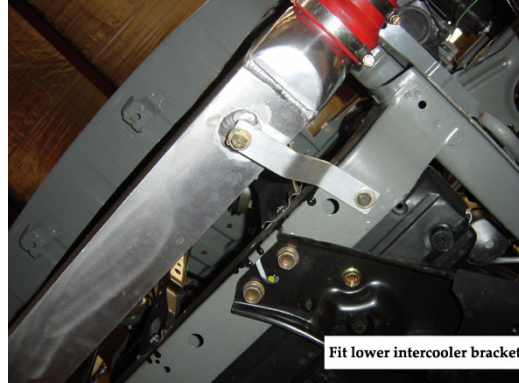


6. Cut a 80mm O.D hole under the battery tray

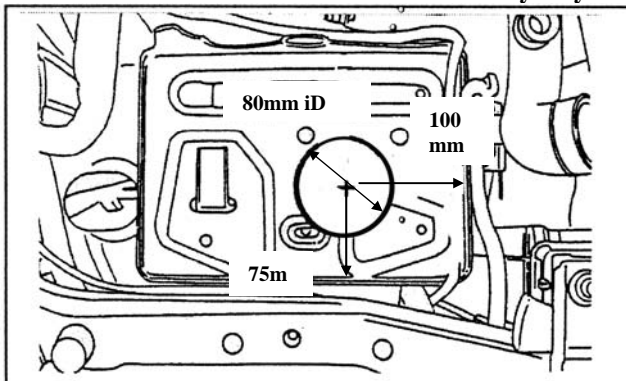


7. Relocate battery tray

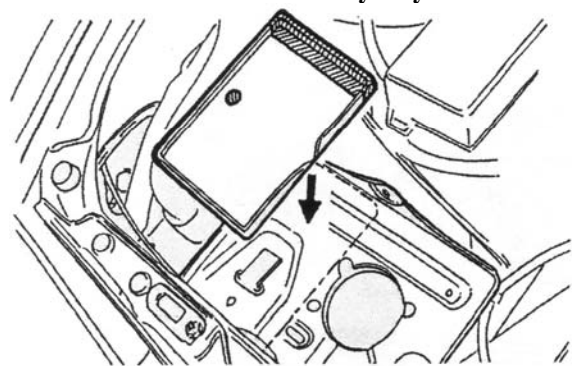

8. Fit Inlet pipe position

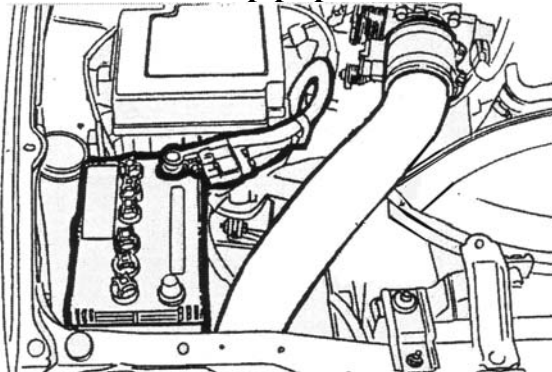

9. Fit inlet pipe and cast pipe

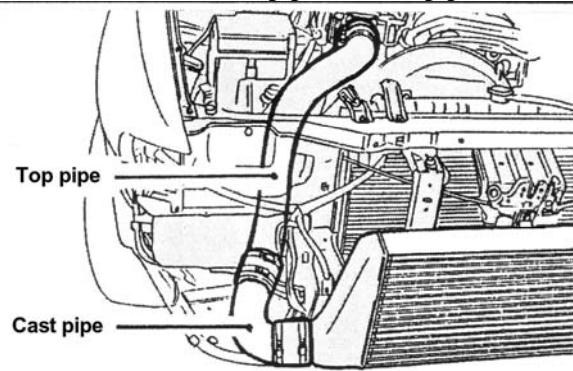

10. Install turbo outlet pipe





finished



Note 1

For S14 please use the enclosed bracket to secure the intercooler from the top, the rest procedure is the same as the S15 kit.

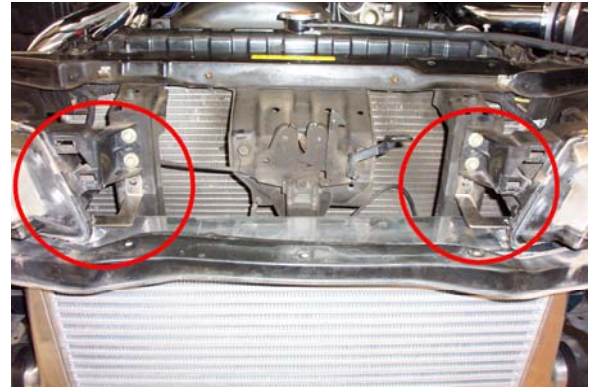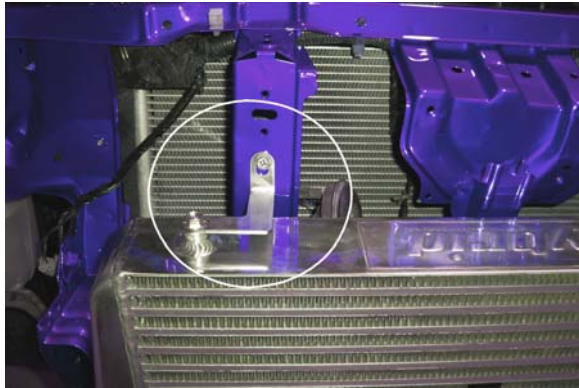

LIMITED WARRANTY

Hybrid Development international will warranty for the period of 1 year from original purchase against all defects in workmanship and materials. Hybrid Development international Ltd is not responsible for expenses incurred for labor, personal injury or inconvenience. Hybrid Development international sole responsibility is to offer a replacement product or to repair the damaged product. Hybrid Development international cannot warranty products damaged by improper installation. All other products sold by Hybrid Development international are warranted by the original manufactures and is not the responsibility of Hybrid Development international. All products are for racing use only.